

Figure 3B-29. Examples of Pavement Markings for Speed Humps Without Crosswalks


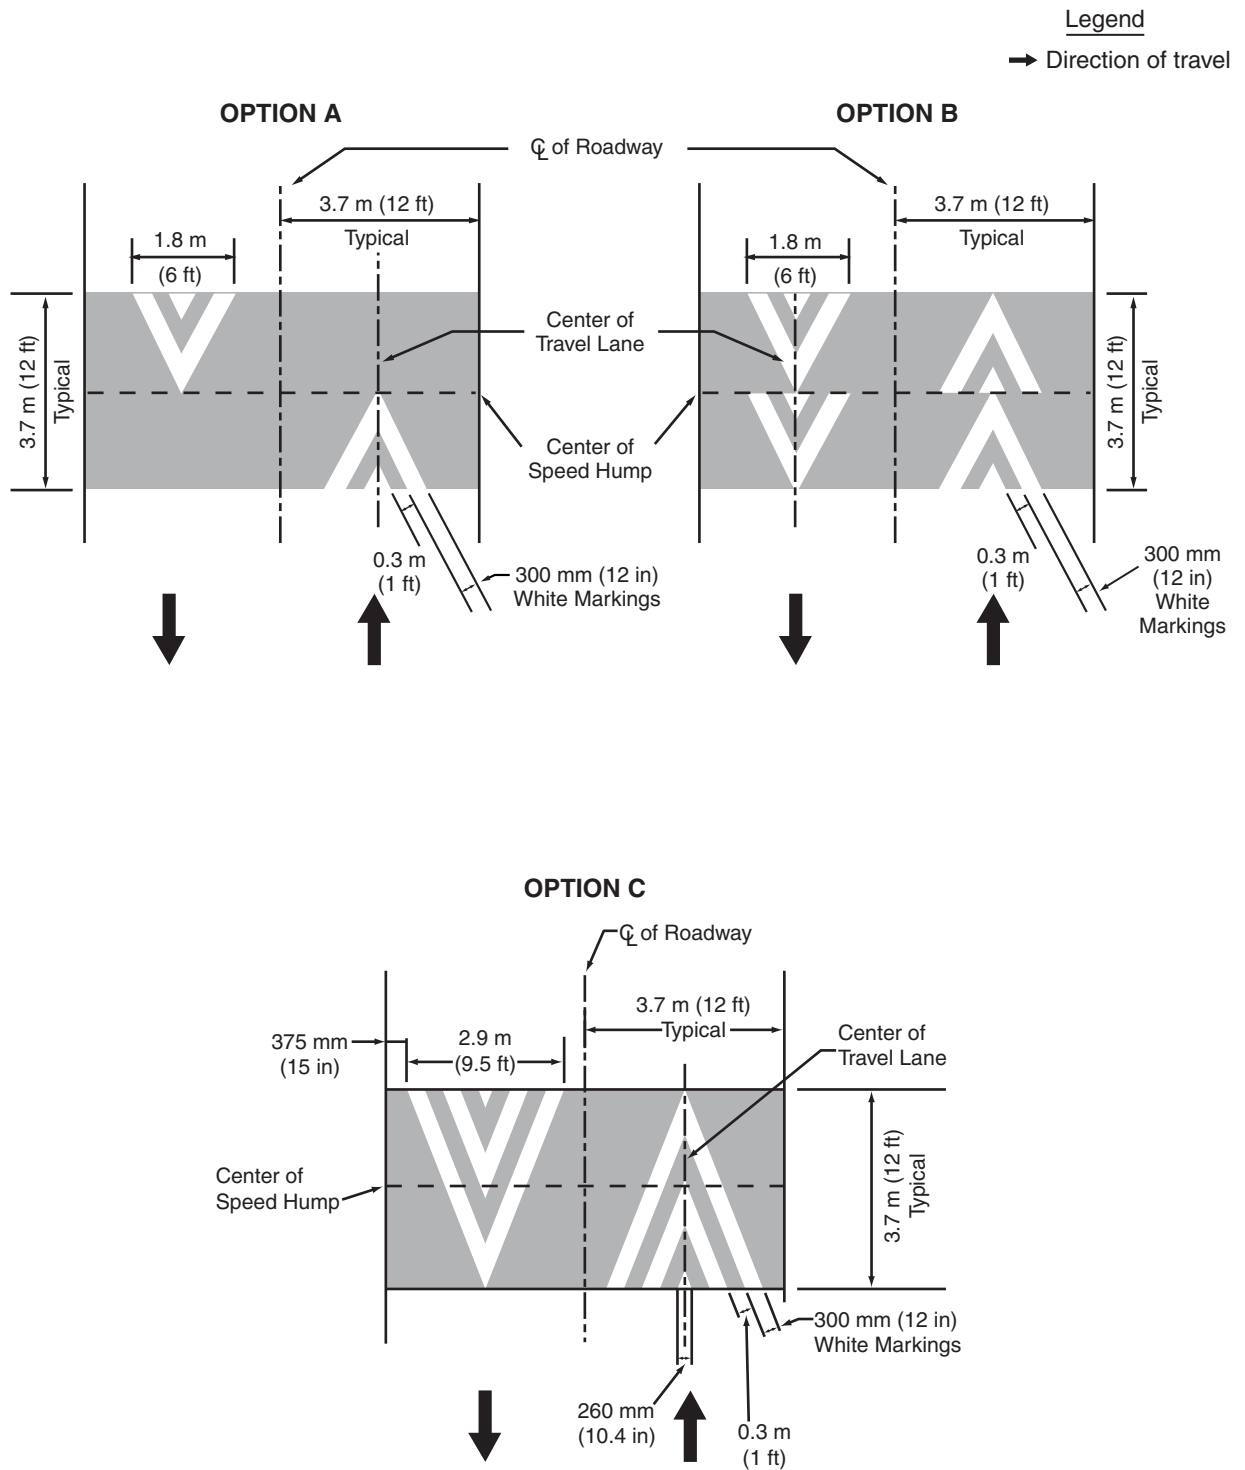


Figure 3B-30. Examples of Pavement Markings for Speed Tables or Speed Humps with Crosswalks

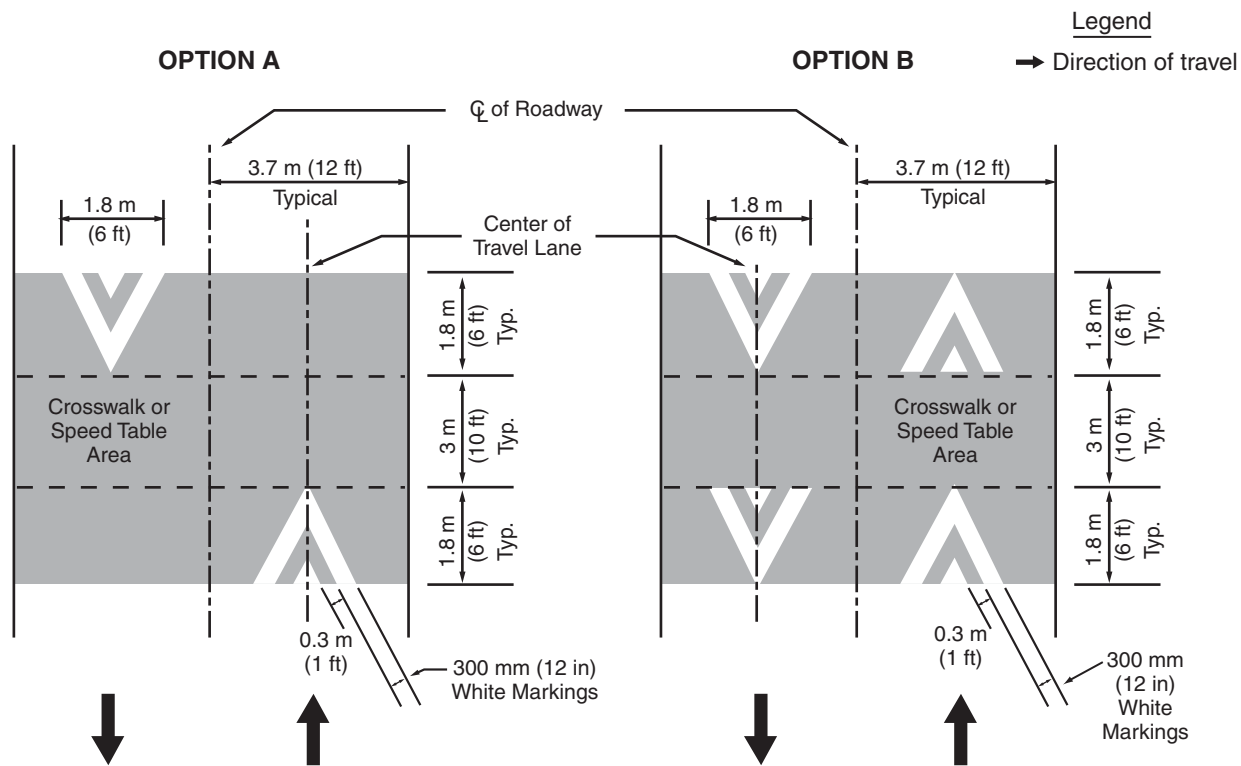

Option:

Advance speed hump markings may be used in advance of an engineered vertical roadway deflection where added visibility is desired or where such deflection is not expected (see Figure 3B-31).

Advance pavement wording such as BUMP or HUMP (see Section 3B.19) may be used on the approach to a speed hump either alone or in conjunction with advance speed hump markings. Appropriate advance warning signs may be used in conformance with Section 2C.24.

Guidance:

If used, advance speed hump markings should be installed in each approach lane.